
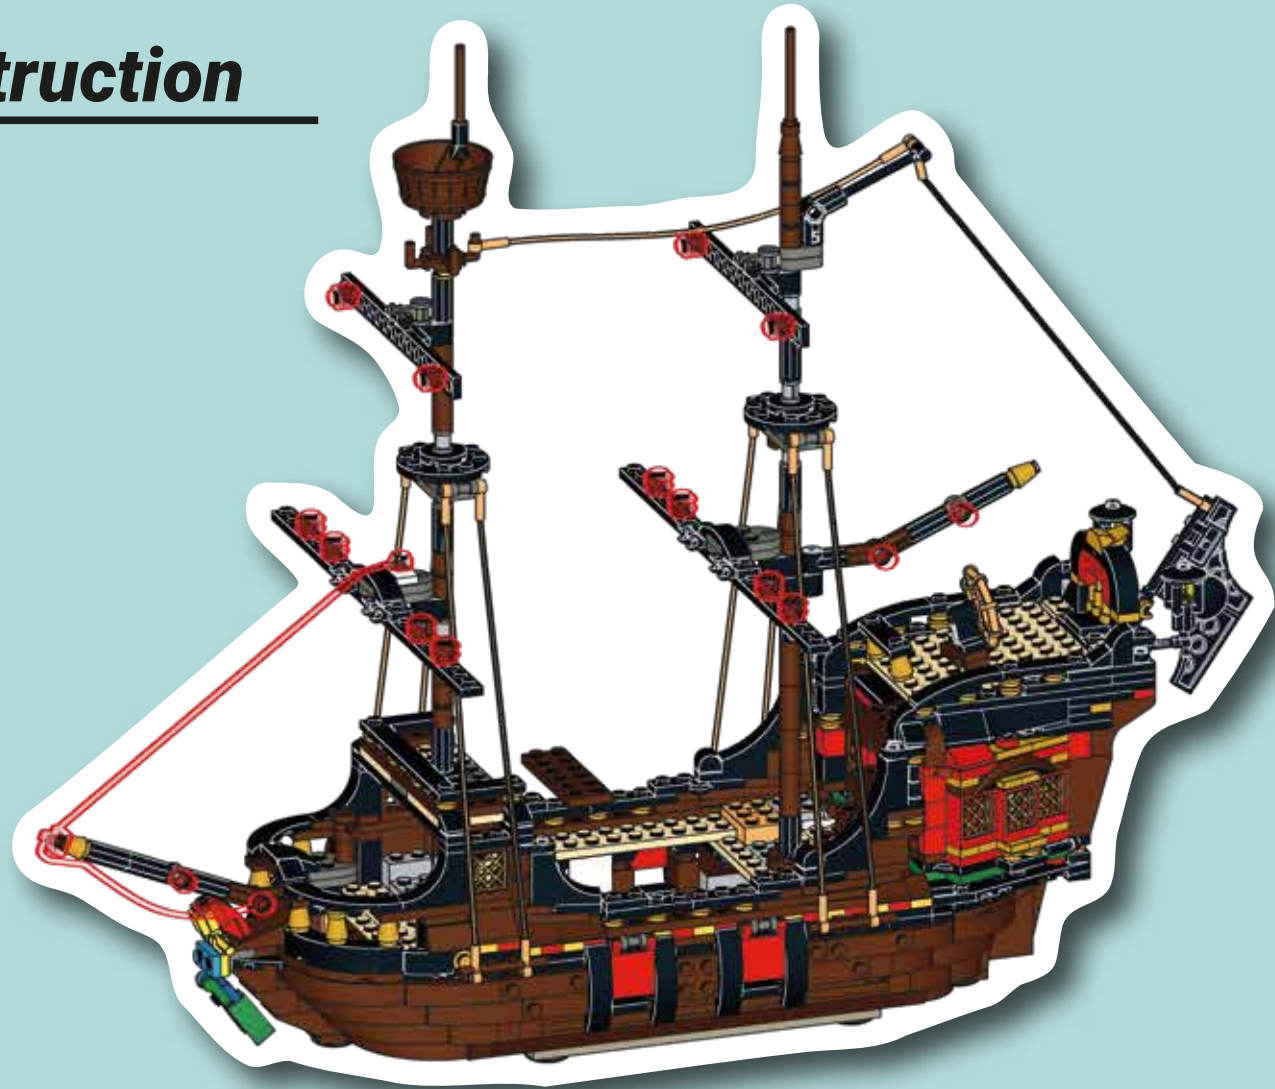


91103 Custom Sails Instruction

Extra parts needed:

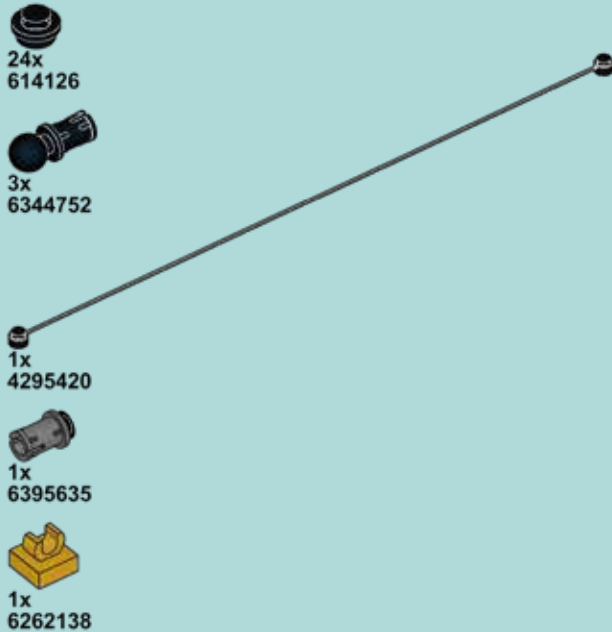

Attaching the Textile Sails

1. Remove all brick-built sails from the ship.
2. On the front mast, remove one of the four Technic axle connectors.
3. Place the extra parts onto the masts as shown in the picture.
4. Secure each sail by sandwiching the fabric between two 1x1 round tiles.
For some sails, thread the fabric through the ropes before fixing them in place.
5. Adjust the ropes and alignment so the sails hang naturally.